


R	5, 2,	4,	6,	7,	8,	9,	10,	11,	12,	13,	14,	15,	16,	17,	18,	19,	20,	21,	22,	23,	24,	25,	26,	27,	28,	29,	30,	31,	32,	33,		
C	11, 12,	4, 2, 1,	49,	9, 7, 16, 6,	17, 15,	56, 18, 13, 14,	24, 26, 22, 19, 10, 8, 3, 3, 20, 21, 27, 28, 25, 29,	31, 30,	32,	34,	35, 36,	3, 37,	38, 39,	41, 40, 42,	60, 44, 43, 45,	46,	48, 47,	62, 50,	53, 52,	54, 55,	58, 59, 57,											
L	6, 7,	1, 3, 1, 39, 40,	33, 8, 3, 4, 4, 34, 32,	5,	10,	9, 11,	13, 12, 17, 17, 16, 18, 21, 19, 20, 20,	22, 24, 24, 23, 25,																								

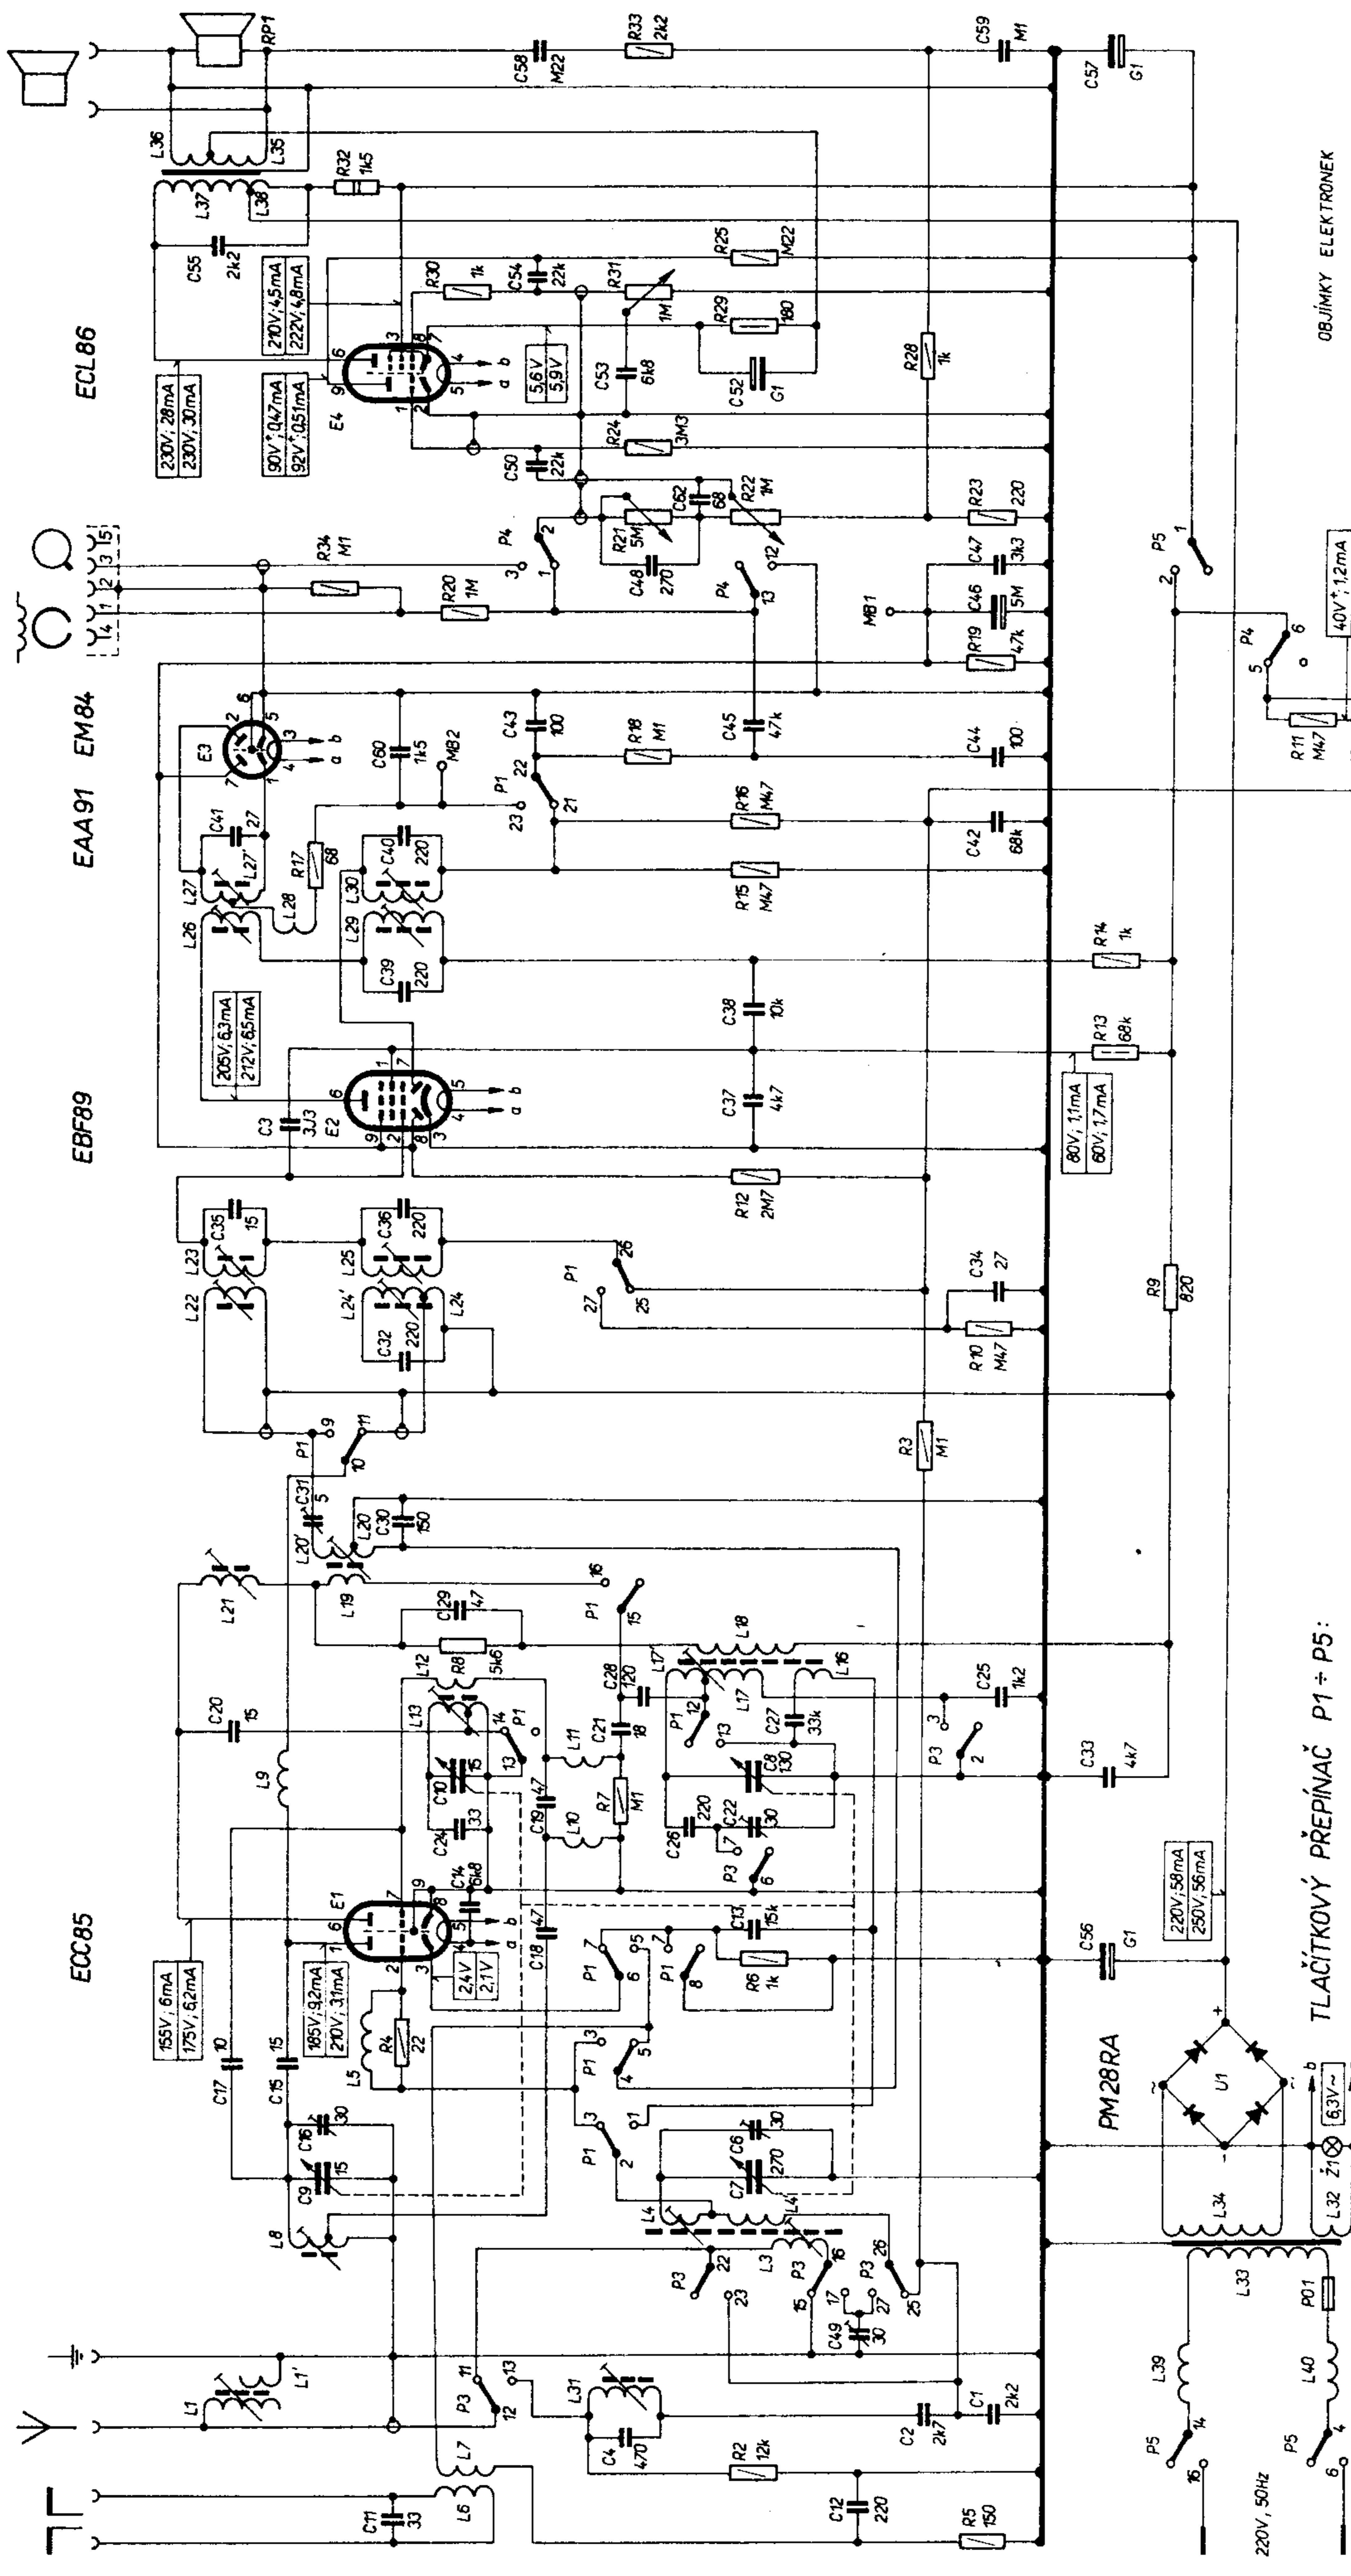

**TLAČÍTKOVÝ PŘEPÍNAČ P1 ÷ P5:**

TLAČÍTKO, OZNAČENÉ	STISKNUTÍM TLAČÍTKA MĚNÍ SE SPOJENÍ TAKTO:	ROZPOJÍ SE
VKV P1	1-2, 3-4, 5-6, 7-8, 9-10, 12-13, 15-16, 22-23, 26-27,	2-3, 4-5, 6-7, 10-11, 13-14, 21-22, 25-26,
SV P2		
DV P3	2-3, 6-7, 12-13, 16-17, 22-23, 26-27,	11-12, 15-16, 25-26,
D P4		1-2, 5-6,
VYP. P5		1-2, 4-6, 14-16,

ÚDAJE NAPĚTÍ A PROUDŮ NAHOŘE PLATÍ PRO VELMI KRÁTKÉ VLNY, DOLE PRO STŘEDNÍ VLNY + MĚŘENÍ ELEKTRONKOVÝM VOLTMETREM.

