


R	1, 2, 18, 12,	1	29, 30, 31, 4,	2	3, 5,	3	4,	4	24,	8, 7,	9, 32, 33, 34, 10, 11, 23,	5	50,	16, 51, 6,	6	16, 8,	53,	17,	52, 38,	9	36, 19,	10	13	15, 20,	11, 19, 21,	14,	17,	18,	
C	1, 2, 18, 12,	1	29, 30, 31, 4,	2	3, 5,	3	4,	4	24,	8, 7,	9, 32, 33, 34, 10, 11, 23,	5	50,	16, 51, 6,	6	16, 8,	53,	17,	52, 38,	9	36, 19,	10	13	15, 20,	11, 19, 21,	14,	17,	18,	
L	6, 7a, 7b,	1,	2, 3, 4, 22, 21, 20, 19,								8, 10, 11, 9,		40, 41,																

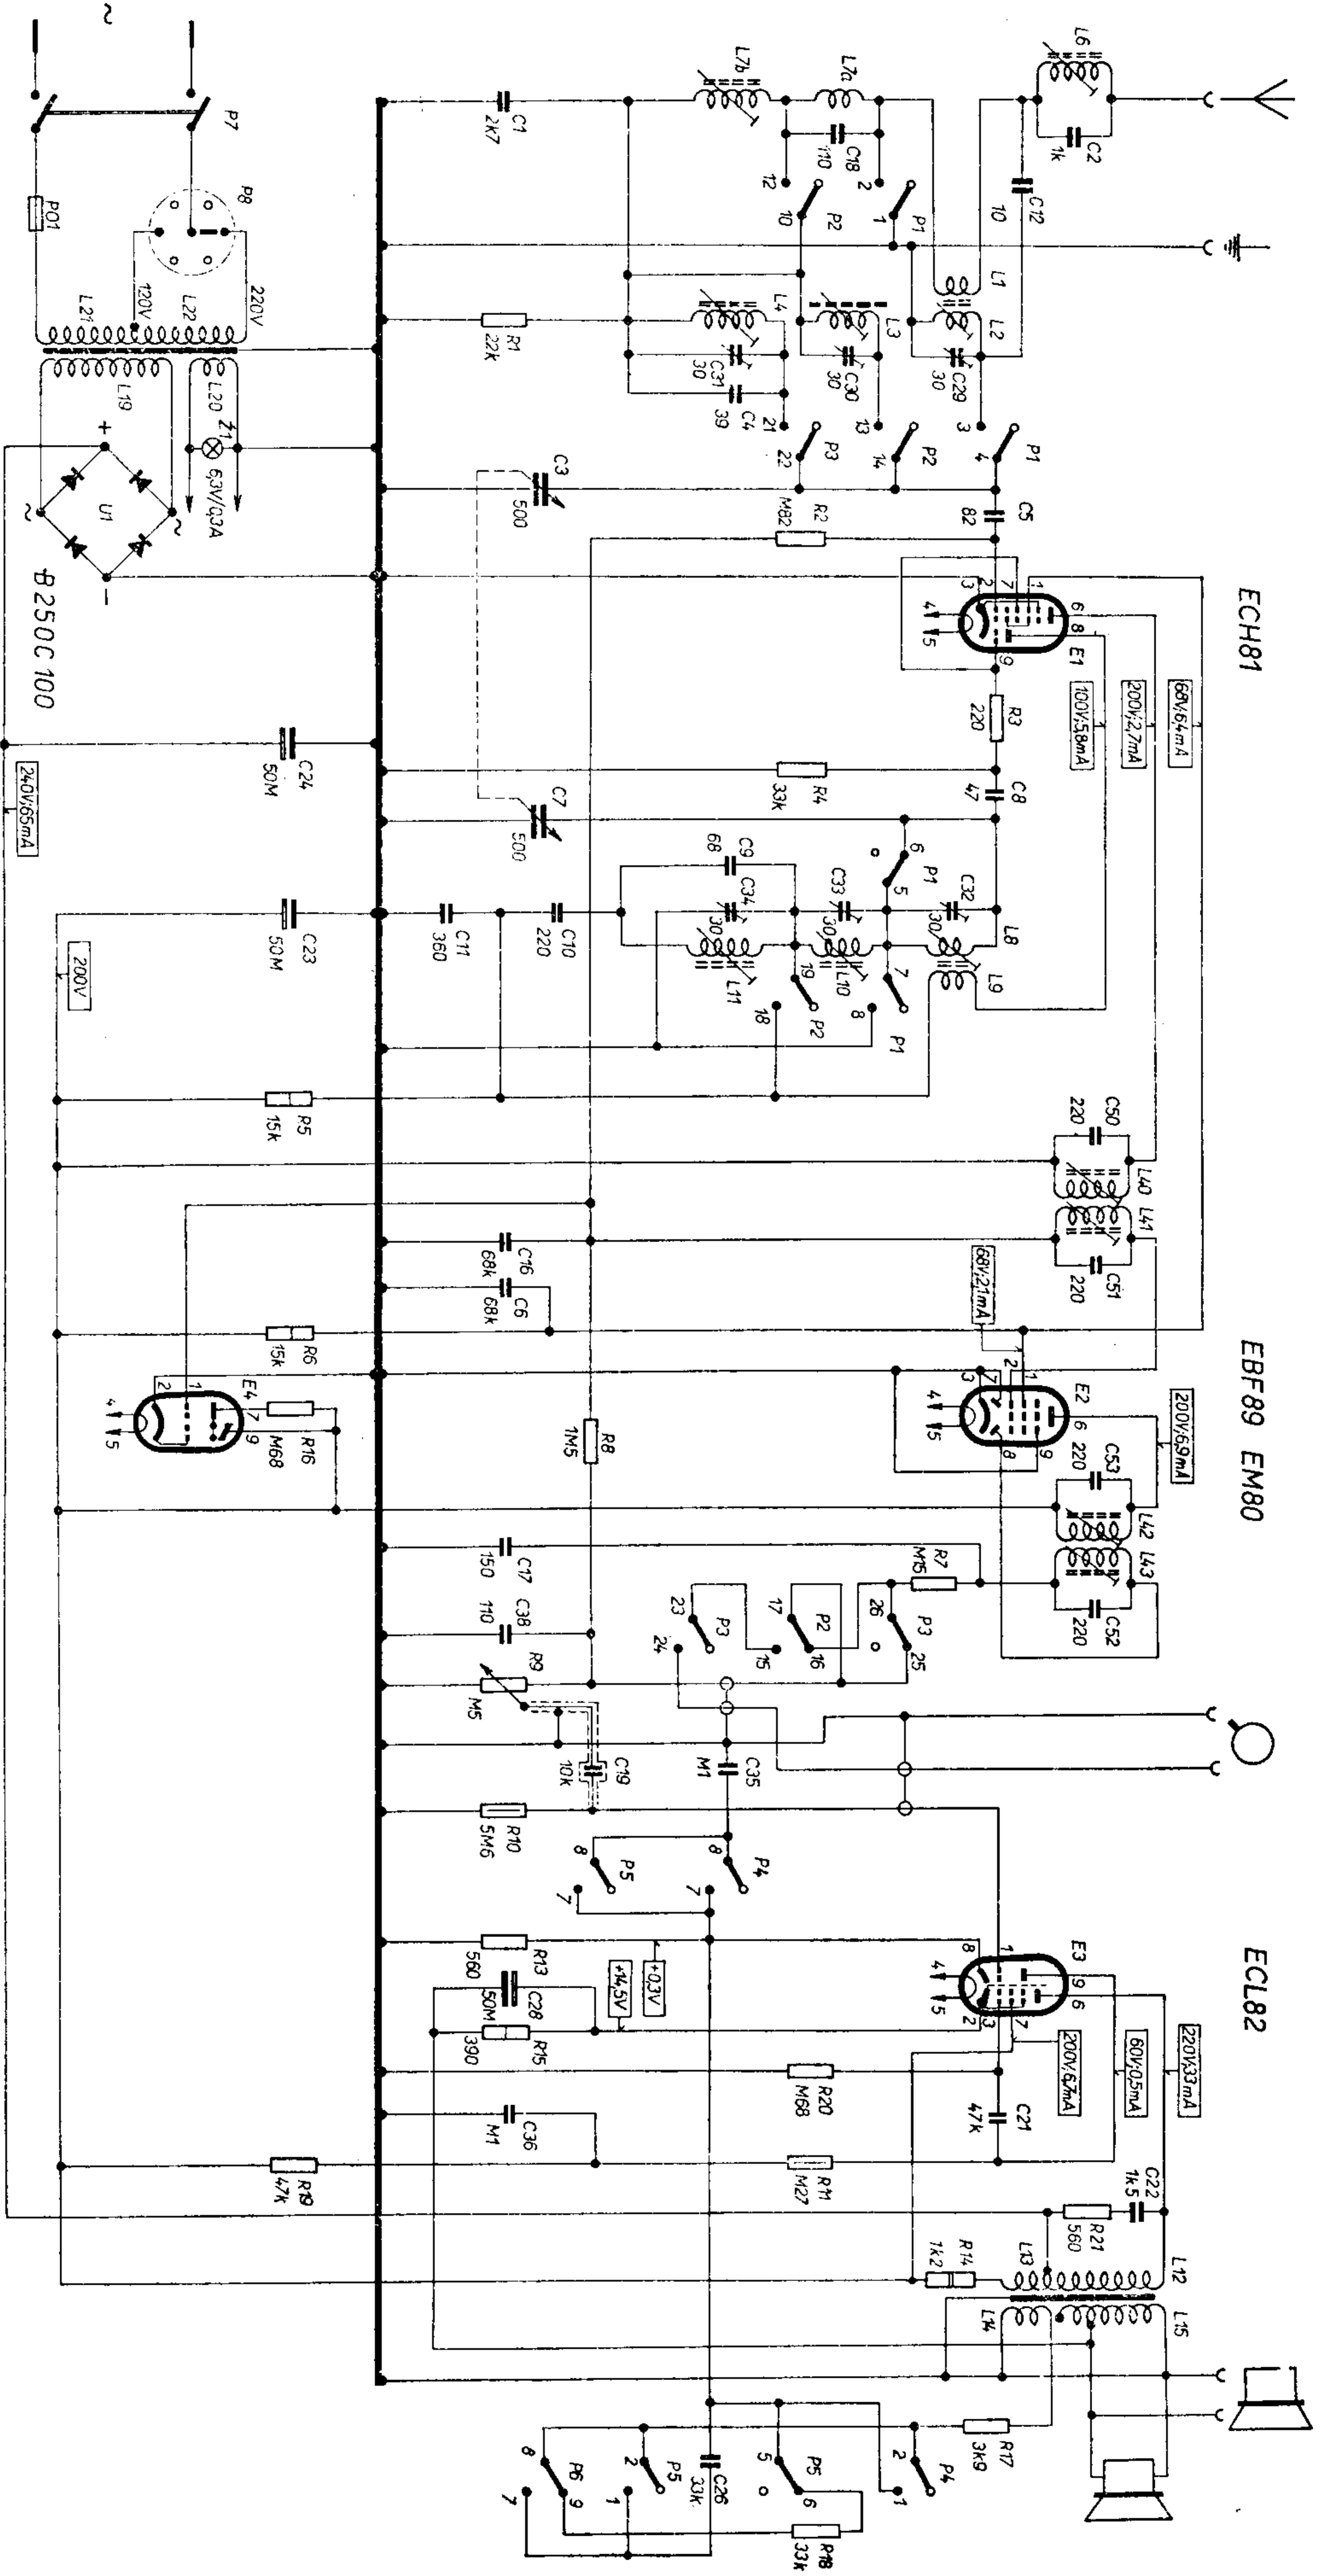

TLAČÍTKOVÝ PŘEPÍNAČ P1 ÷ P3

TLAČÍTKO OZNACENÉ	STISKNUTÍM TLAČÍTKA MĚNÍ SE SPOJENÍ TAKTO :	ROZPOJÍ SE
KV	1-2, 3-4, 7-8,	5-6,
P1	10-11, 13-14, 15-17, 18-19,	16-17,
P2	21-22, 23-24,	25-26,
P3		

TLAČÍTKOVÝ PŘEPÍNAČ P4 ÷ P6

TLAČÍTKO OZNACENÉ	STISKNUTÍM TLAČÍTKA MĚNÍ SE SPOJENÍ TAKTO :	ROZPOJÍ SE
REC	1-2, 7-8,	5-6,
ORCH	1-2, 7-8,	8-9,
P5		
P6		

PATICE ELEKTRONEK

