
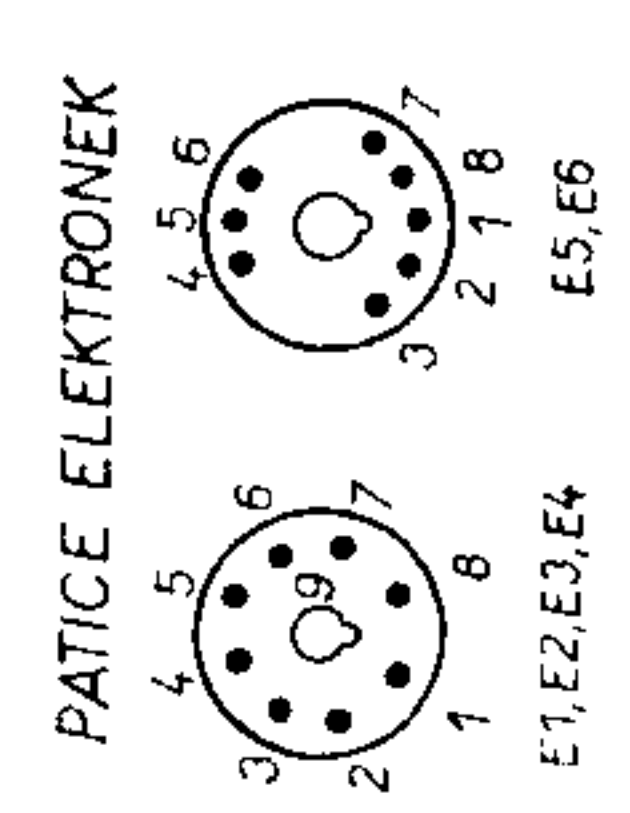


R	45,	2, 1,	3,	5, 4,	8,	10,	11, 12, 13, 30, 9, 31,	46, 22, 34, 25, 21, 42,	20, 27,	14, 41, 39, 19, 15,	16, 24, 44, 38, 37, 18,	28, 29, 17,
C	14,	15, 16, 54, 54,	17, 55,	33, 32, 6, 7, 8, 9, 10, 20, 37, 55, 51, 66, 35, 21, 26, 7,	34, 62, 27, 68, 36, 34, 23, 22,	25, 41, 10, 11, 12, 13, 26,	50, 28,	60, 65,	29, 44,	59, 64,	30, 37,	69, 31, 45,
L	1,	34, 2, 3, 35, 35, 36, 37, 23,	4, 5, 4, 5, 6, 7,	16, 16,	17, 17,	18, 18,	19, 19,	22, 12, 13, 12, 20, 20,	23,	21, 21,	14, 24, 15, 14,	30, 31,

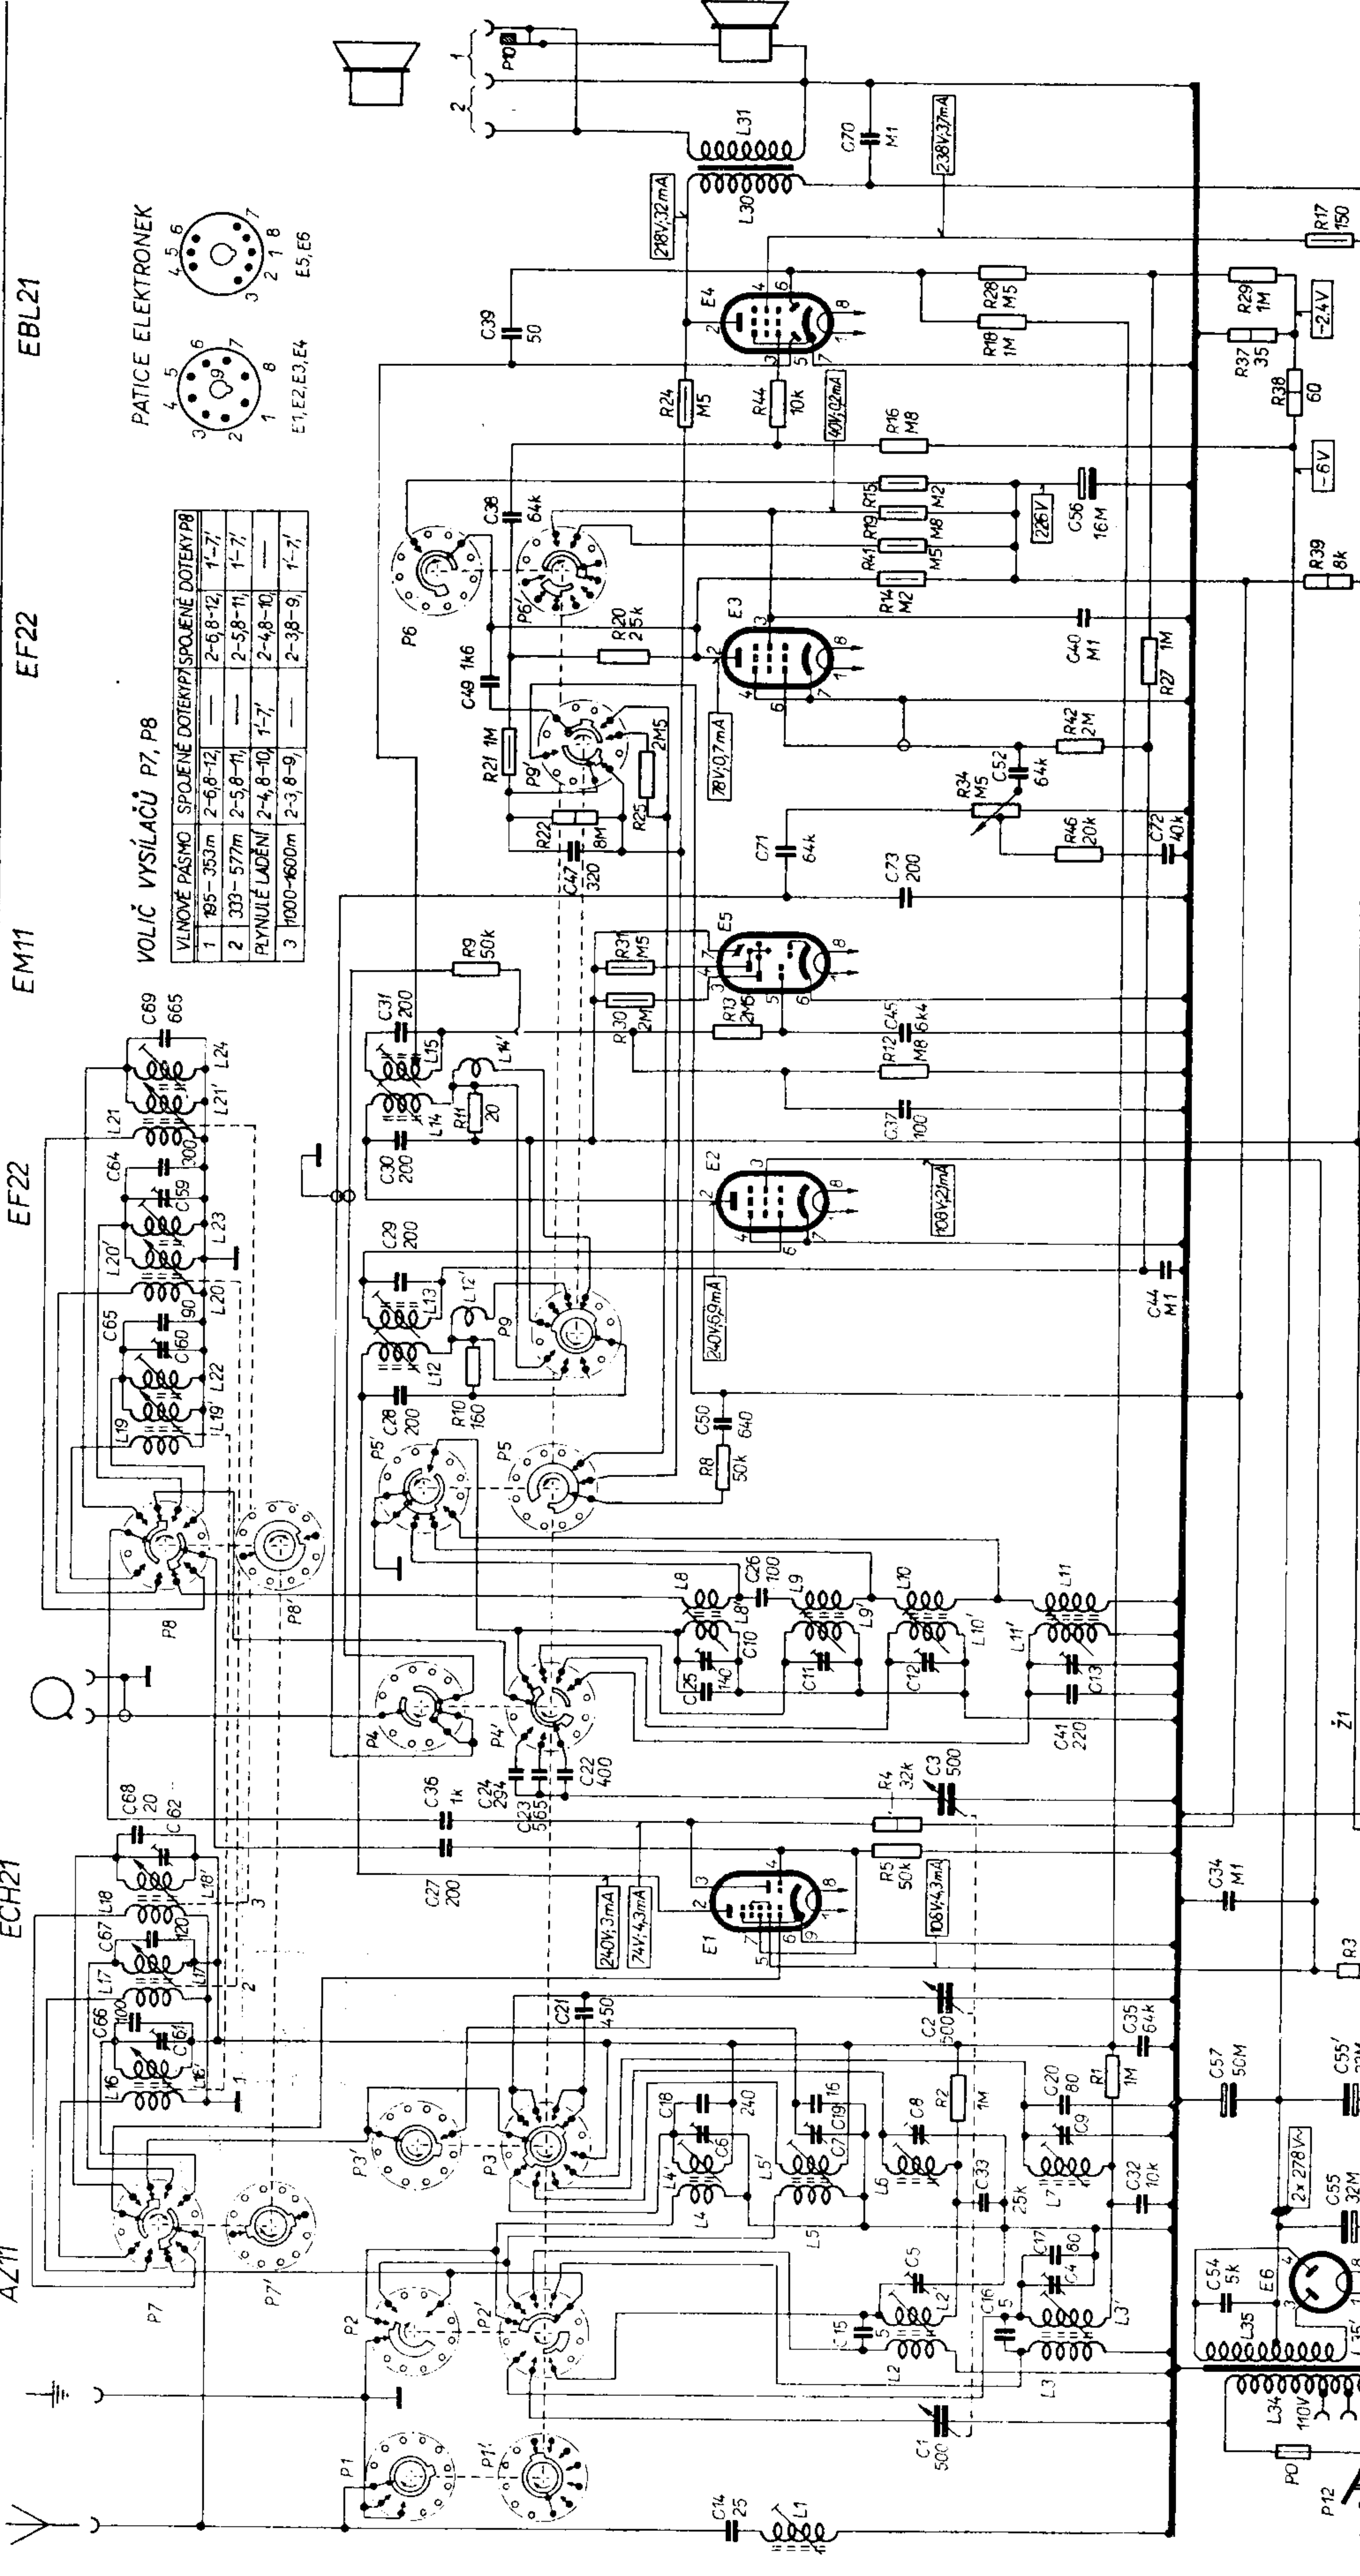

VOLIČ VYSILAČŮ P7, P8


VLNOVÉ PÁSMO	SPOJENÉ DOTYKY	SPOJENÉ DOTYKY P8
1 195-353m	2-6-8-12	1-7
2 333-577m	2-5-8-11	1-7
PLYNULE LADĚNÍ	2-4-8-10, 1-7	2-4-8-10
3 1000-1600m	2-3-8-9	1-7

PŘEPÍNAČ PŘEDNESU P9

POLOHA	SPOJENÉ DOTYKY P9
REČ	2-3-4-5-8
SÍR. PÁSMO	2-3-4-5-8
STŘEDNÍ P.	12-2-3-4-8
UZKÉ P.	11-12-2-3-8
REČ. HUDBA	10-11-12-3-8

PŘEPÍNAČ ROZSAHŮ P1-P6

ROZSAHY	SPOJENÉ DOTYKY P1	SPOJENÉ DOTYKY P2	SPOJENÉ DOTYKY P3	SPOJENÉ DOTYKY P4	SPOJENÉ DOTYKY P5	SPOJENÉ DOTYKY P6
KV1	4-10	2-6	7-8-9	2-3-10	6-7-8	1-12-11-10
KV2	5-10	1-2	3-6	2-5-11	6-7-8	1-12-11-10
SV	6-10	1-2-3	4-6	10-11	2-4-10	1-12-11-10
DV	7-10	1-2-3	5-6	11-12	2-3-9	1-12-11-10
OSTAND.	11-1	8-10	1-2-3-6	---	2-8	---
OMIKRO	12-1	9-10	2-3-6	---	9-1	---

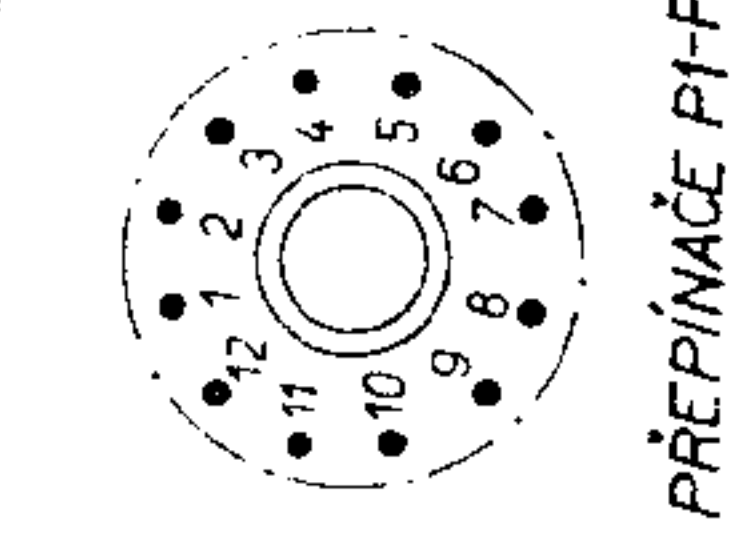

Zapojení přijímače 623A „MAJ“ (poslední provedení)